

# Concept System

## CUSTOMER INSTRUCTIONS

### TO SET SYSTEM (Turn on)

The DAY indicator should be showing. Enter your code number. Check that the system is clear (none of the zone indicators are showing). If clear, the sounder will produce a bleep tone and you may now leave by the correct route. The system will set at the end of exit time. If the system is not clear, the sounder will produce a broken tone and the zone indicator will display the fault. Either, enter your code to turn off and investigate the cause of the fault, or omit the faulty zone from the system.

### TO UNSET THE SYSTEM (Turn off)

Enter your code, if the system is clear (no alarm has been activated) the unit will return to DAY. If the system has been activated, then entering the code will turn off the sounders and the cause of the alarm will be displayed. Press RESET to clear the indication and return to DAY.

### TO OMIT ANY ZONE FROM THE SYSTEM.

Starting from the DAY mode, Enter code and the exit time begins. Press OMIT and the exit tone will now change to an omit tone. Enter the zone numbers you wish to omit e.g. pressing 2 then 4 will remove zones two and four from the system. The zone two and four leds will flash to show correct selection. If you make a mistake and a wrong zone number is pressed then press O, this will cancel the previous selection and allow another zone to be omitted. When the selection is correct press SET, the unit will now return to exit mode and the timer will continue. The maximum number of zones which may be omitted at any one time is three.

### TO QUICK SET THE SYSTEM

During the exit time the system may be set quickly by pressing SET. This removes the time normally allowed for exit, and would be used if you are not leaving the premises. If you omit part of the system and require quick set, press SET twice.

### POWER INDICATORS

A red power indicator should be showing at all times, on both the power supply and the keypad. If either indicator goes out call the engineer to check the system.

## CUSTOMER PROGRAMMING

Customer code change, Alarm memory recall and Alarm tests are all available from the customer program. With the DAY light showing press the following buttons in the correct sequence.

### CODE CHANGE

Press **PROG** button All lights will show.

Enter your code

? ? ? ?

DAY and TAMPER lights show.

Press **8** Four Zone indicators show.

now enter

New CODE (4 digits)

□ □ □ □

The unit will bleep twice and DAY and TAMPER lights show again.

Press **RESET** to return to DAY.

The new code is now entered into the Concept memory.

### ALARM MEMORY RECALL

Press **PROG** button All lights will show.

Enter your code

? ? ? ?

DAY and TAMPER lights show.

Press **MEM** button

The last alarm will now be displayed for 5 seconds. The system will bleep and return to program.

Press **RESET** to return to DAY.

### ALARM TEST

Press **PROG** All lights will show.

Enter your code

? ? ? ?

DAY and TAMPER lights show.

Press **0** DAY, TAMPER and ATTACK lights show.

The unit is now in the test program.

Press **2** To test the Strobe (continues until 0 is pressed).

Press **3** To test the Outside Sounder (continues until 0 is pressed).

Press **4** To test Low Sounder (continues until 0 is pressed).

Press **2 4** To test High Volume Sounder (continues until 0 is pressed).

Press **5** To enter walk test. Internal Sounder will now operate each time a zone is opened (continues until 0 is pressed).

Press **RESET** twice to return to DAY mode.