

SWITCHING THE SYSTEM ON

1. Enter your 4 digit code.
2. Press on.
3. Exit tone will now sound and you may leave the premises by the exit route and exit door. The system may be stopped during the exit time by pressing off.

SWITCHING THE SYSTEM ON AT NIGHT

(Night Set) Zones are pre deselected by engineer.

1. Enter your 4 digit code.
2. Press night set.
3. Dull tone will now sound, proceed as normal and system will automatically set.

SWITCHING THE SYSTEM ON AND DESELECTING ZONES DURING DAY OR NIGHT

This may be used to switch out certain parts of the premises.

1. Enter 4 digit code.
2. Press deselect.
3. Press number of zone/zones required to be deselected.
4. Press on night set, exit tone will sound, leave the premises, or continue.
5. When the system is set, lights will stop flashing on the control panel.

CUSTOMER KEYCODE PROGRAMMING

The customer can change his 4 digit code as follows:-

1. Enter (OLD 4 DIGIT KEYCODE)
2. Enter (9 9 9 9) All L.E.D.'s illuminated.
3. Enter (NEW 4 DIGIT KEYCODE)
4. Enter (ON) New keycode stored in memory

CAUTION: Any forgotten keycodes may result in an engineer call-out.

SWITCHING THE SYSTEM OFF

On entering the building:-

1. Entry tone will sound.
2. Proceed to panel through exit route only.
3. Enter 4 digit code (the green 'On' light will flash every time you press a digit).
4. the system will now switch off.

SWITCHING THE SYSTEM OFF DURING AN ALARM CONDITION

1. Enter 4 digit code.
2. Press 'Off' twice.

RE-SETTING THE SYSTEM AFTER AN ALARM OR TAMPER CONDITION

1. Press zero four times.
2. All lights will flash then it will reset.
3. After reset only the power light should be continuously lit, if not try again, if fault persists call the engineer.